




HOW TO APPLY THE TAGS

IMPORTANT – USE ONLY AN ALLFLEX APPLICATOR

BOTH PARTS OF EACH TAG MUST DISPLAY THE SAME NUMBER

The male part is applied to the back of the ear.

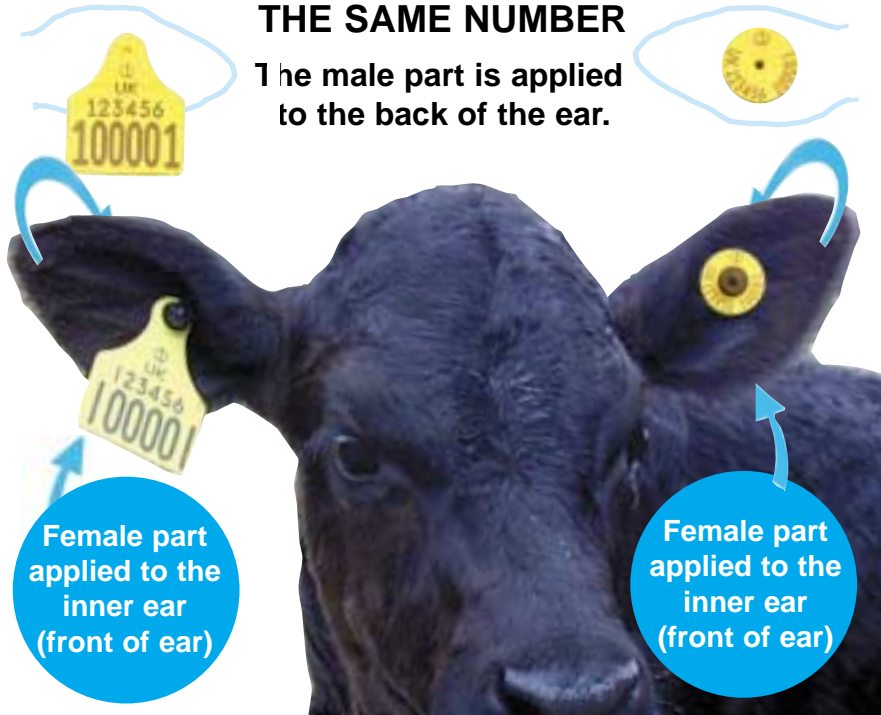

Apply well into the centre of the ear between the two parallel ear cartilages.

Use thumb to open retainer clip and push the female part firmly into the jaw.



Ensure the pin is straight. Place the male part onto the applicator pin.



APPLICATION TIPS

- Apply tags under clean conditions, check the ear and applicator are clean, disinfect as necessary.
- Ensure the calf's head is restrained.
- Ensure the male and female parts are lined up in the applicator and that the numbers are the same.
- Keep the male part of the tag to the back of the ear.
- Squeeze the applicator firmly with the female part of the tag positioned between the two cartilages in the inner ear. The applicator will click and release when the insertion is complete.
- Rotate the tag to ensure free movement.